


# NOVA LUCE


9009253

1

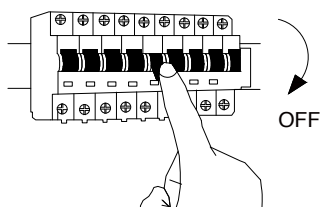


Turn off the general switch

2

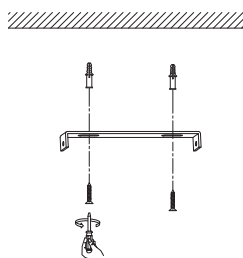


Drill holes & apply plastic anchors  
With screws

3

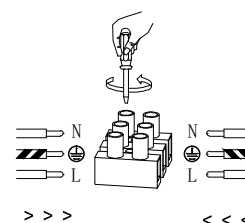


Connect the wires

4

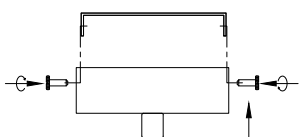


Apply the side screws

5




Apply the bulb

6

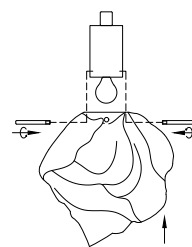

Apply the glass  
& Apply the side screws

7

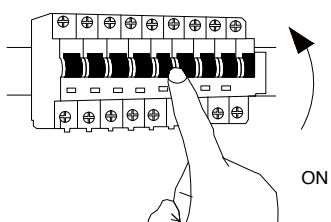

Turn on the general switch

