



NOVA LUCE


9009295

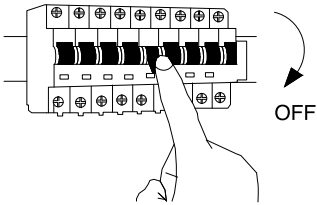


1. Turn off the general switch

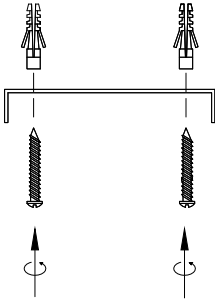


2. Drill holes apply plastic anchors with screws

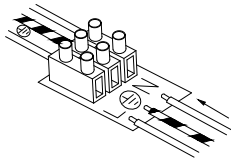


3. Connect the wires

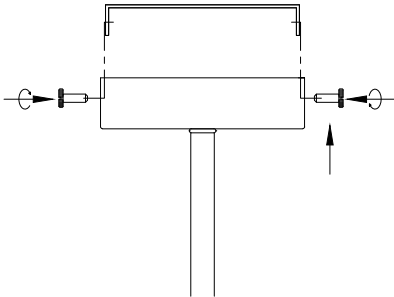


4. Apply side screws

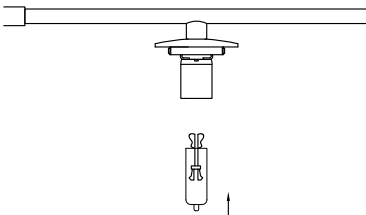

5. Insert the bulb

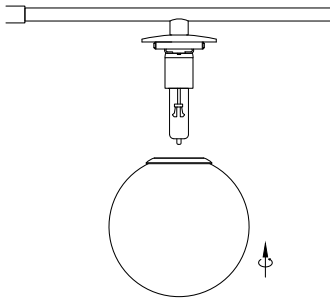

6. Apply the acrylic

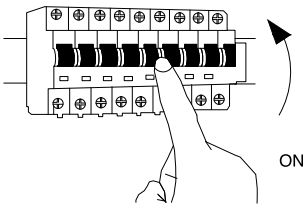

7. Turn on the general switch

