



NOVA LUCE


9088103, 9088104

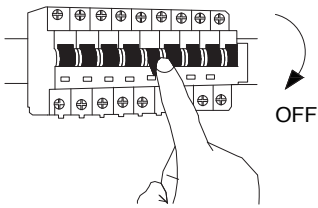


1 Turn off the general Switch

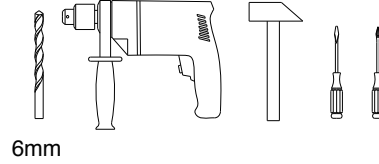

2 Tools you need

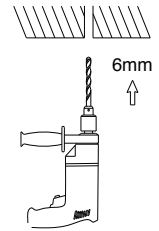


3 Drill a hole 6mm

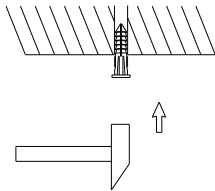


3 Apply plastic anchors




4 DONT touch the led

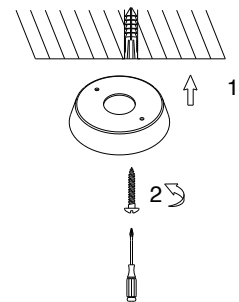


6 Apply the screws

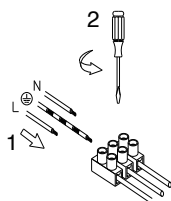


5 Connect the wires

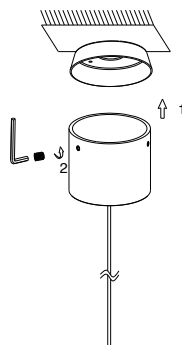

6 Apply the side screws

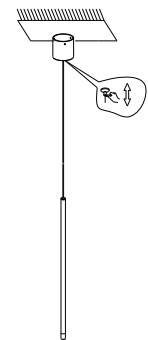

6 Control it

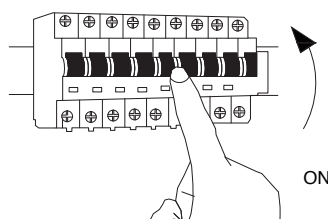

7 Turn on the general Switch