



# NOVA LUCE


9088135

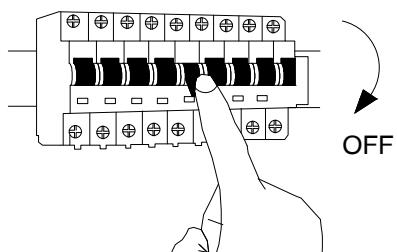


1. Turn off the general Switch

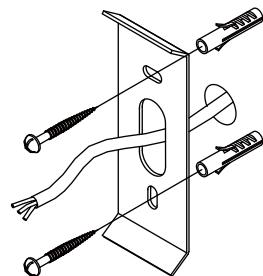



2. Align, mark and drill holes  
to apply the screws

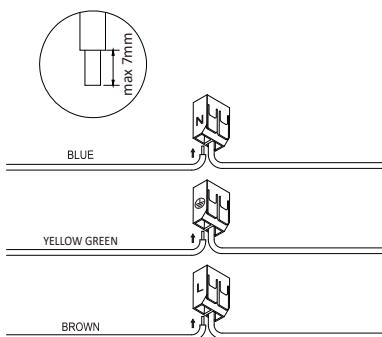

3. Connect the wires

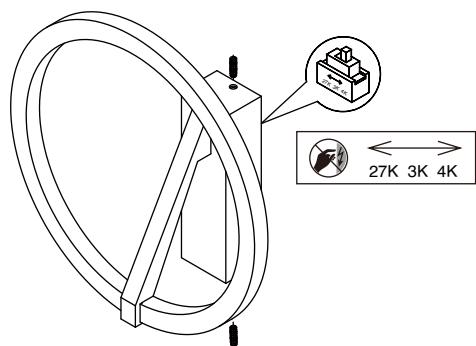

4. Apply the side screws

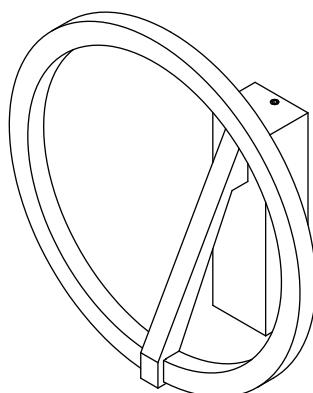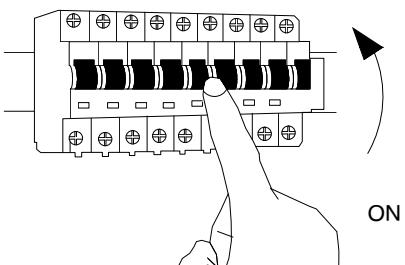

5. Turn on the general Switch